


USER MANUAL

MOBILE **CONTAINING**

CUP CAROUSEL

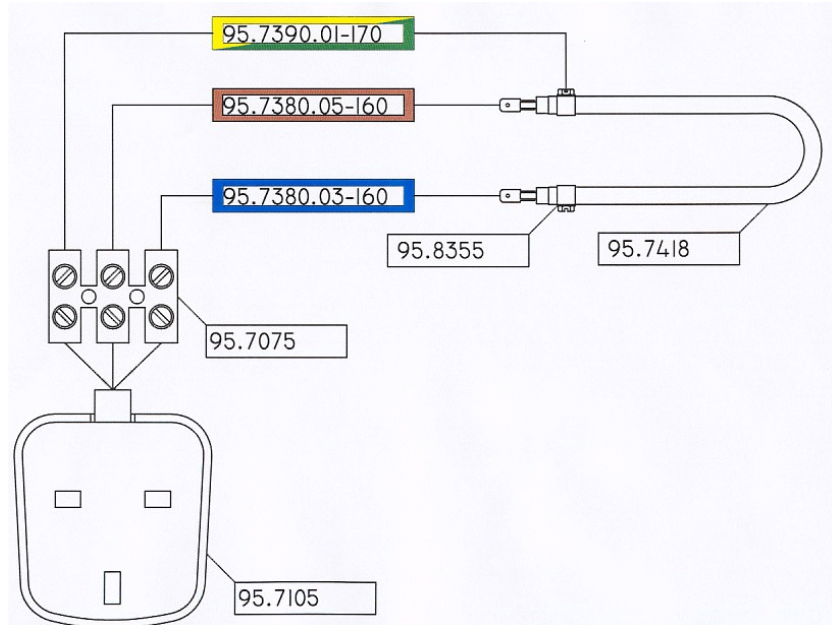

MOBILE containing B.V.
 NIJVERHEIDSTRAAT 11 - 17
 NL 3316 AP DORDRECHT
 TELEPHONE (31) (0)78 6132575
 TELEFAX (31) (0)78 6144541
info@mobilecontaining.nl
www.mobilecontaining.nl

Issued 11/2003



MANUAL CUP CAROUSEL

Table of contents.

Chapter

1. Hints for maintenance.	1
4. Heating element replacement.	2
Appendix A: List of parts/exploded view/electric diagram	2/3

Registration file

Nr.	Type/Model dispenser	Serialno.

1. Hints for maintenance.

We herewith want to give you some hints for maintenance of the cup carousel, brand MOBILE containing, you bought.

2. Cleaning.

First, take the cable plug form the socket.

We advise you to clean the unit with a damp cloth with any proprietary non-abrasive cleaner.

Never clean the heated unit with water.
Never clean the heated unit with a high pressure hose.

3. Electrical parts.

We advise you to check once a year all the electrical parts of the unit.

Cable and plug, heating-element and wiring must function well and be in a good condition.

Replace defective parts immediately.

This is for your safety.

All parts can be ordered from MOBILE UK LIMITED 01706 - 868160

MANUAL CUP CAROUSEL

4. Heating element replacement.

- ▶ Unplug the unit from power source.
- ▶ Loosen the top screw.
- ▶ Remove the complete cup holder unit.
- ▶ Loosen the 4 screws of the electrical housing with element-holder.
- ▶ Loosen the hose clip (for positioning and fixation of the element in the element holder) and move the heating-element downwards.
- ▶ Loosen the second hose clip (for positioning, fixation and earth-connection of the heating-element in the element holder).
- ▶ Loosen the wiring to the heating-element (receptacles) and remove second hose clip with the earth connection.
- ▶ The heating-element can be taken out and replaced.
- ▶ Other parts that may be replaced are
 - ▶ A - cable clip (not visible on the drawing).
 - ▶ B - bushing for cable.
 - ▶ C - strain relief.
 - ▶ D - connecting block (between cable and internal wiring).
 - ▶ E - internal wiring.
- ▶ For re-assembly, reverse this procedure, fasten all screws properly.

**CARE MUST BE TAKEN WITH CABLE ROUTING TO PREVENT CONTACT WITH THE ROTATING BASE.
WE RECOMMEND CABLE BE > ROUTED THROUGH COUNTER TOP DIRECTLY UNDERNEATH BASE OF CAROUSEL**

Appendix A: List of parts/exploded view/electric diagram.

Article number	Description	Number in drawing
95.7030	Strain relief for cable with plug	9C
95.7075	Connecting block 3-way	9A
95.7105	Cable 3 x 0,75 mm ² with 13 Amp plug top with 5 Amp fuse	1
95.7217	Bushing for cable	9B
95.7390.01	Elect. Wiring yellow/green L= 170 mm	9E
95.7380.05	Elect. Wiring braun L= 160 mm	9E
95.7380.03	Elect. Wiring blue L= 160 mm	9E
95.7418	Heating-element 230 V - 200 W	8
95.8355	Hose-clip	5/6